



FIREHALT ACCESS HATCH ASSEMBLY 1200 X 600

Fitting Instructions

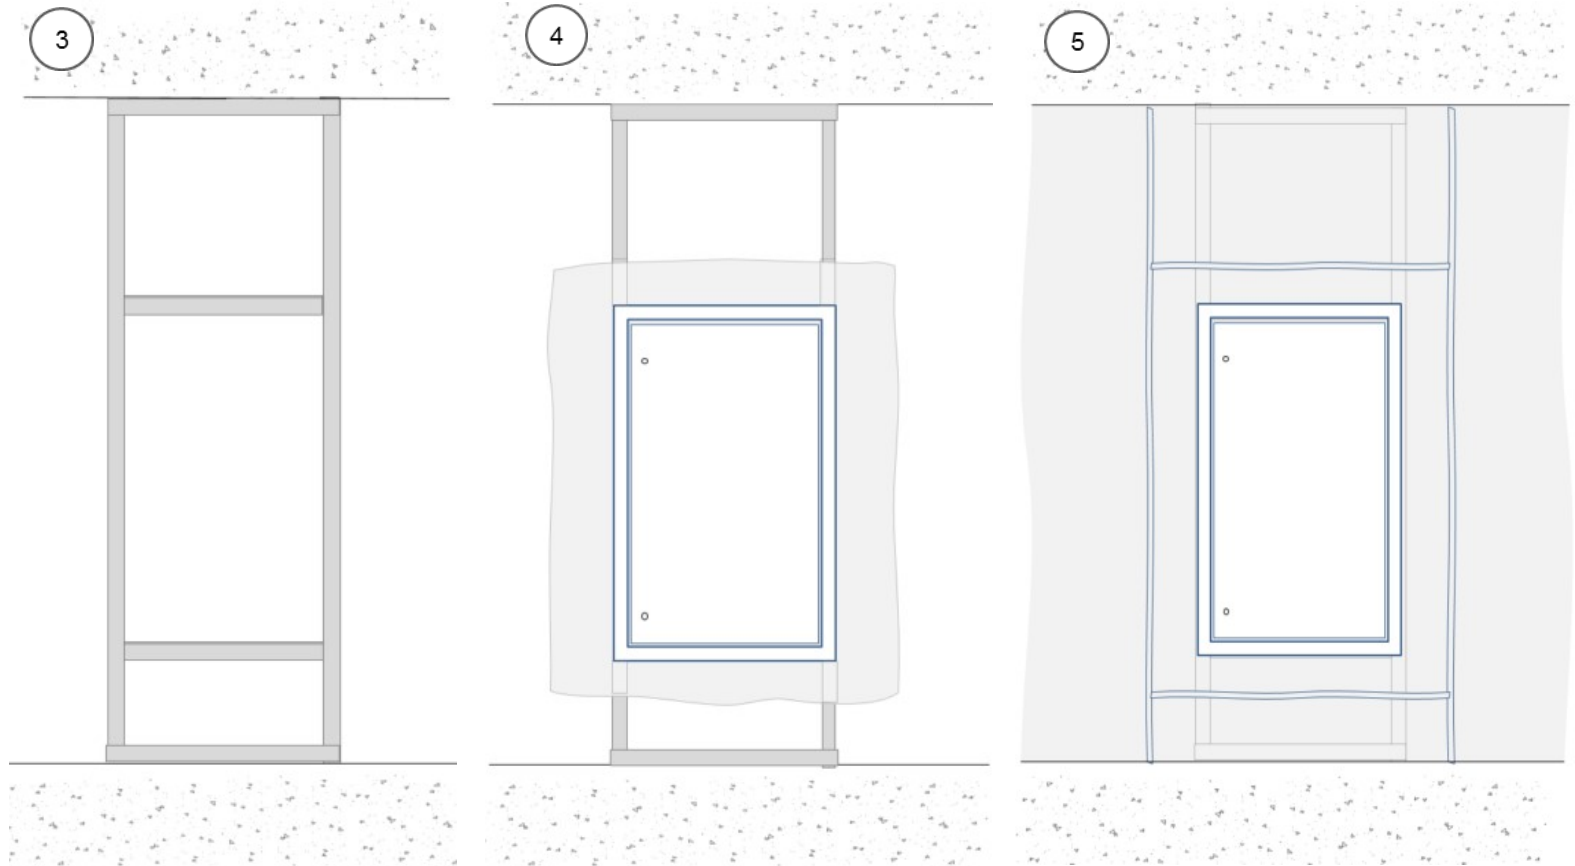

1. Remove packaging and inspect to ensure all metal components and the attached Firehalt barrier surround are free from damage.
2. For packaging and transport the attached Firehalt barrier is supplied folded inwards. After inspection re-fold for easier installation.
3. Construct a support frame from 70mm stud or Metstrut/Unistrut channel. Leave the fasteners to one of the frame verticals and the upper horizontal slightly loose.
4. With the door closed and the attached barrier folded inwards place the hatch into the support frame. With the door open secure the hatch with self-tap screws by way of the fixing holes provided on the inside edge of the hatch frame. Finally tighten all joining fasteners on the support frame..
5. The attached barrier is 1300mm wide (1full width) x 2m long so it can be joined to adjacent barriers and the top/bottom infill panels using standard 50mm stapled seams.

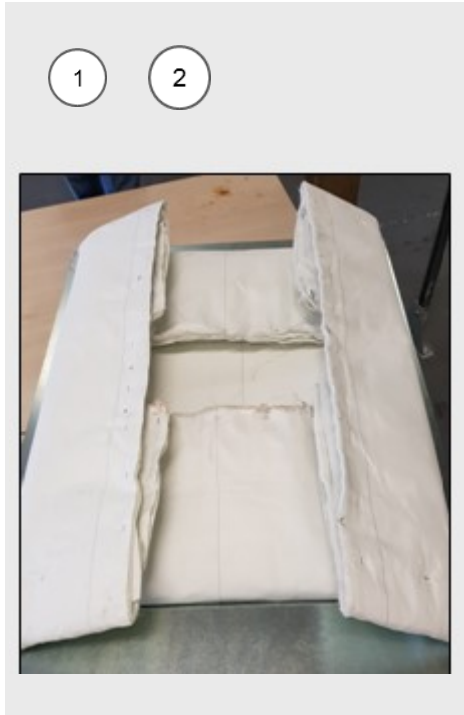

Tel : +44 (0)161 344 2484
 Fax : +44 (0)161 344 2486
 Email : sales@firehalt.com
 Web : www.firehalt.com

Title: Access Hatch Method Statement	Products: Firehalt Ultralite 60:15 Firehalt barriers: 30:30 60:30 120:30	Fix Detail # 20 Version: 3 Date: 25/06/2019
Assessment Ref:		